
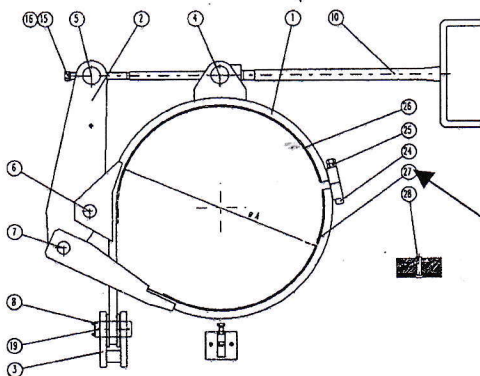


INSTRUCTIONS FOR ORDERING SPARE PARTS

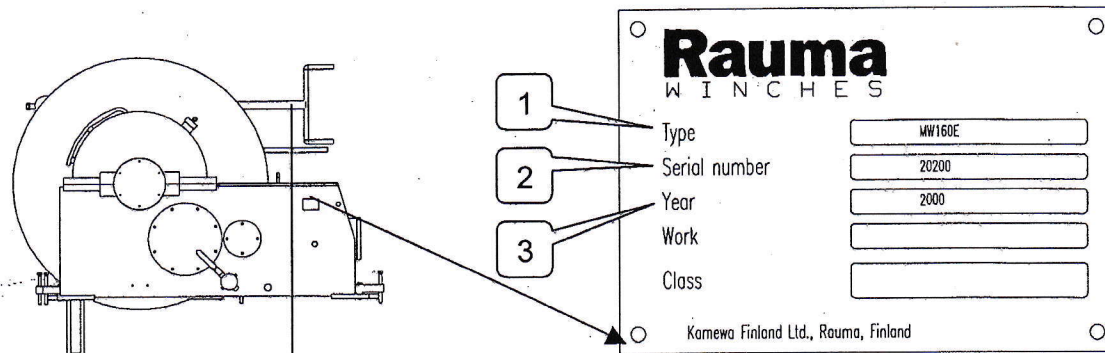

When spare parts are ordered, at least following informations have to be mentioned at the order.

1. Winch type
2. Manufacture no. / Work no.
3. Manufacture year
4. Assembly dwg.no. and name
5. Part's no.
6. Part's code/drawing no.
7. Part's description
8. Amount of needed parts

KAMEWA FINLAND LTD. PART LIST
 Work No. : 514-3698-111 -01
 Drawing No. : KJA.5207285-0-AEA

BRAKE ASSEMBLY, MW

26.01.00 /JRA Page 1 of 2

PART No	CODE/DRW	DESCRIPTION	UN	QTY
25	A 4514056	HEXAGON NUT	8 M20 SFS 2067 DIN 934 FE/ZN PCS	6
26	A 6567324	BRAKE LINING	MM	1
27	A 6567324	BRAKE LINING	MM	1
28	A 6568984	BRAKE RIVET	PCS	32

5

6

7

8

Example: Mooring winch, type MW160E.
 Manufacture no, 20200.
 Manufacture year, 2000.
 Assembly dwg.no. 5207285-0-AEA, Brake assembly, MW.
 Part no. 27, code no. 6567324, brake lining.
 Amount 1 pcs.